




## GDF03MW & GDS03 – Adjusting Lever Cable tension

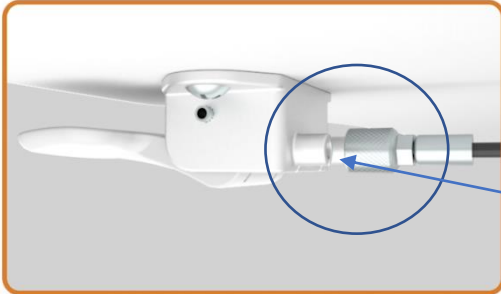


Fully tighten the adjustment bolt to remove the cable slack – The metal spigot should not be screwed into the back of the lever at this stage

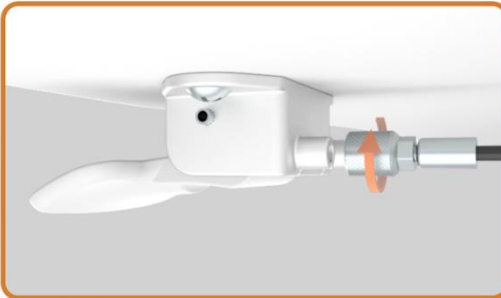

Turn the metal spigot clockwise – You will notice more of the threaded bolt appear on each turn

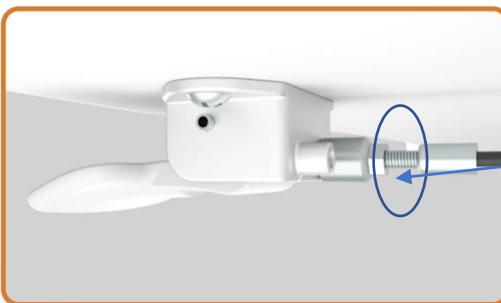

Once tightened, there will be approx. 15mm of the threaded bolt visible

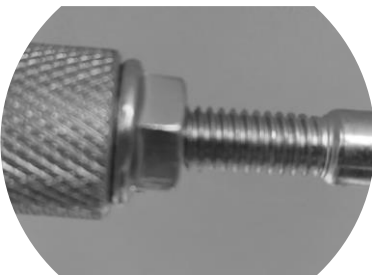

Please note – The locking nut behind the spigot must be loosened before adjusting. Turn the spigot clockwise to expose more thread, making sure its not being attached to the lever at this stage

